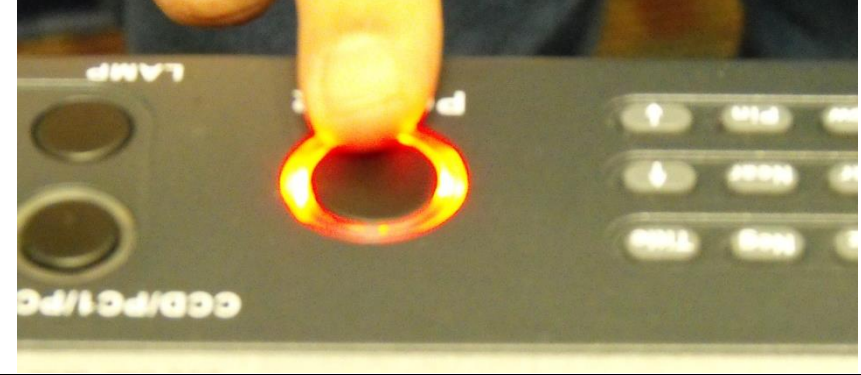






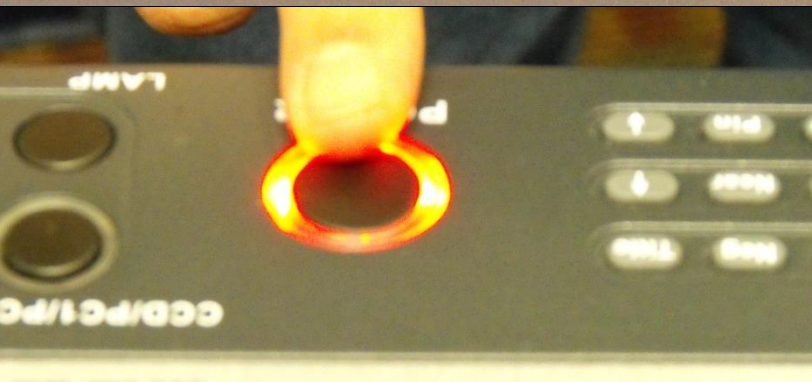


Classroom Presentation System—QD3900

 A close-up photograph of a hand's index finger pressing a button on a control panel. The button is surrounded by a glowing red ring. To the left of the button, there are two circular ports labeled 'LAMP' and 'CCD/PC1/PC2'. To the right, there are several other buttons with labels like 'P', 'MIR', 'NEG', 'TILT', 'D/S', 'FAR', 'NEAR', 'P/W', 'PIN', 'SPLIT', and arrows.	<p>Switcher is built into the document camera. First turn on the document camera. Button is "RED" when off.</p>
 A close-up photograph of a hand's index finger pressing a button on a control panel. The button is surrounded by a glowing blue ring. To the left of the button, there are two circular ports labeled 'LAMP' and 'S-VIDE'. To the right, there are several other buttons with labels like 'P', 'MIR', 'NEG', 'TILT', 'D/S', 'FAR', 'NEAR', 'P/W', 'PIN', 'SPLIT', and arrows.	<p>Button turns "BLUE" when on.</p>
 A close-up photograph of a hand's index finger pressing a button on a control panel. The button is surrounded by a glowing blue ring. To the left of the button, there are two circular ports labeled 'LAMP' and 'S-VIDE'. To the right, there are several other buttons with labels like 'P', 'MIR', 'NEG', 'TILT', 'D/S', 'FAR', 'NEAR', 'P/W', 'PIN', 'SPLIT', and arrows.	<p>Turn projector on by pressing the Ppw button and release quickly. It takes 30 seconds to a minute for the projector to warm up.</p>
 A close-up photograph of a hand's index finger pressing a button on a control panel. The button is surrounded by a glowing blue ring. To the left of the button, there are two circular ports labeled 'LAMP' and 'S-VIDE'. To the right, there are several other buttons with labels like 'P', 'MIR', 'NEG', 'TILT', 'D/S', 'FAR', 'NEAR', 'P/W', 'PIN', 'SPLIT', and arrows.	<p>You can change the source that is being projected (Computer, Doc Camera) by pressing the CCD/PC1/PC2 button. Blue is Document Camera.</p>

	<p>Green is Computer.</p>
	<p>To switch to the DVD/VCR press the S-Video/Video button to "GREEN"</p>
	<p>When finished turn the projector off first by pressing the Ppw button for 3 seconds. You will hear the projector click off.</p>
	<p>Please do not forget to turn the document camera off. The power button should be "RED"</p>