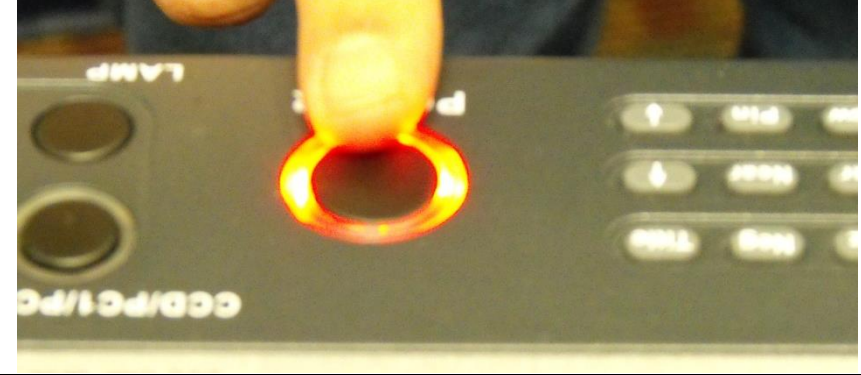






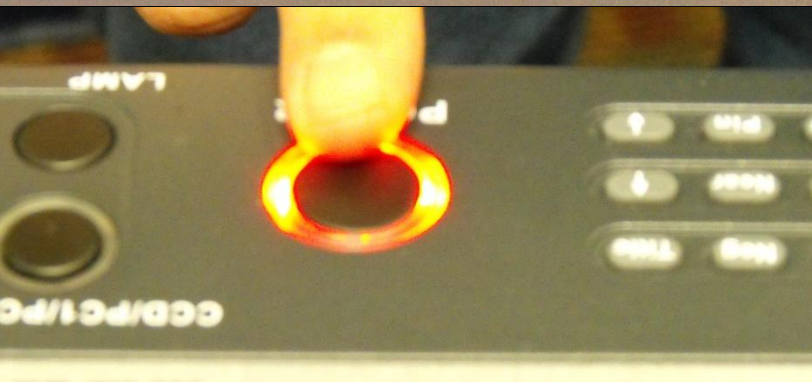


Classroom Presentation System—QD700

	<p>Switcher is built into the document camera. First turn on the document camera. Button is "RED" when off.</p>
	<p>Button turns "BLUE" when on.</p>
	<p>Turn projector on by pressing the Ppw button until it comes on. It takes 30 seconds to a minute for the projector to warm up.</p>
	<p>You can change the source that is being projected (Computer, Doc Camera) by pressing the CCD/PC1/PC2 button. Blue is Document Camera.</p>

	<p>Green is Computer.</p>
	<p>To switch to the DVD/VCR press the S-Video/Video button to "GREEN"</p>
	<p>When finished turn the projector off first by pressing the Ppw button for 3 seconds. You will hear the projector click off.</p>
	<p>Please do not forget to turn the document camera off. The power button should be "RED"</p>